



**MERCURY SPILL  
MANAGEMENT**



**SEN HOSPITAL**

# SAFETY MEASURES ADOPTED IF BP APPARATUS BROKEN AND MERCURY SPILLED





Inform Admin and keep Caution board  
“Mercury Spill Do Not Enter” in order to alert others






Mercury kit Contains 2 pairs of Gloves, Face Mask  
Syringe, Protective eye glass, Apron, Torch, 2 plastic bag  
and plastic container half filled with water.





Remove all Jewels and watch.  
Then wear protective glass, gloves, mask, apron  
and safety glass.

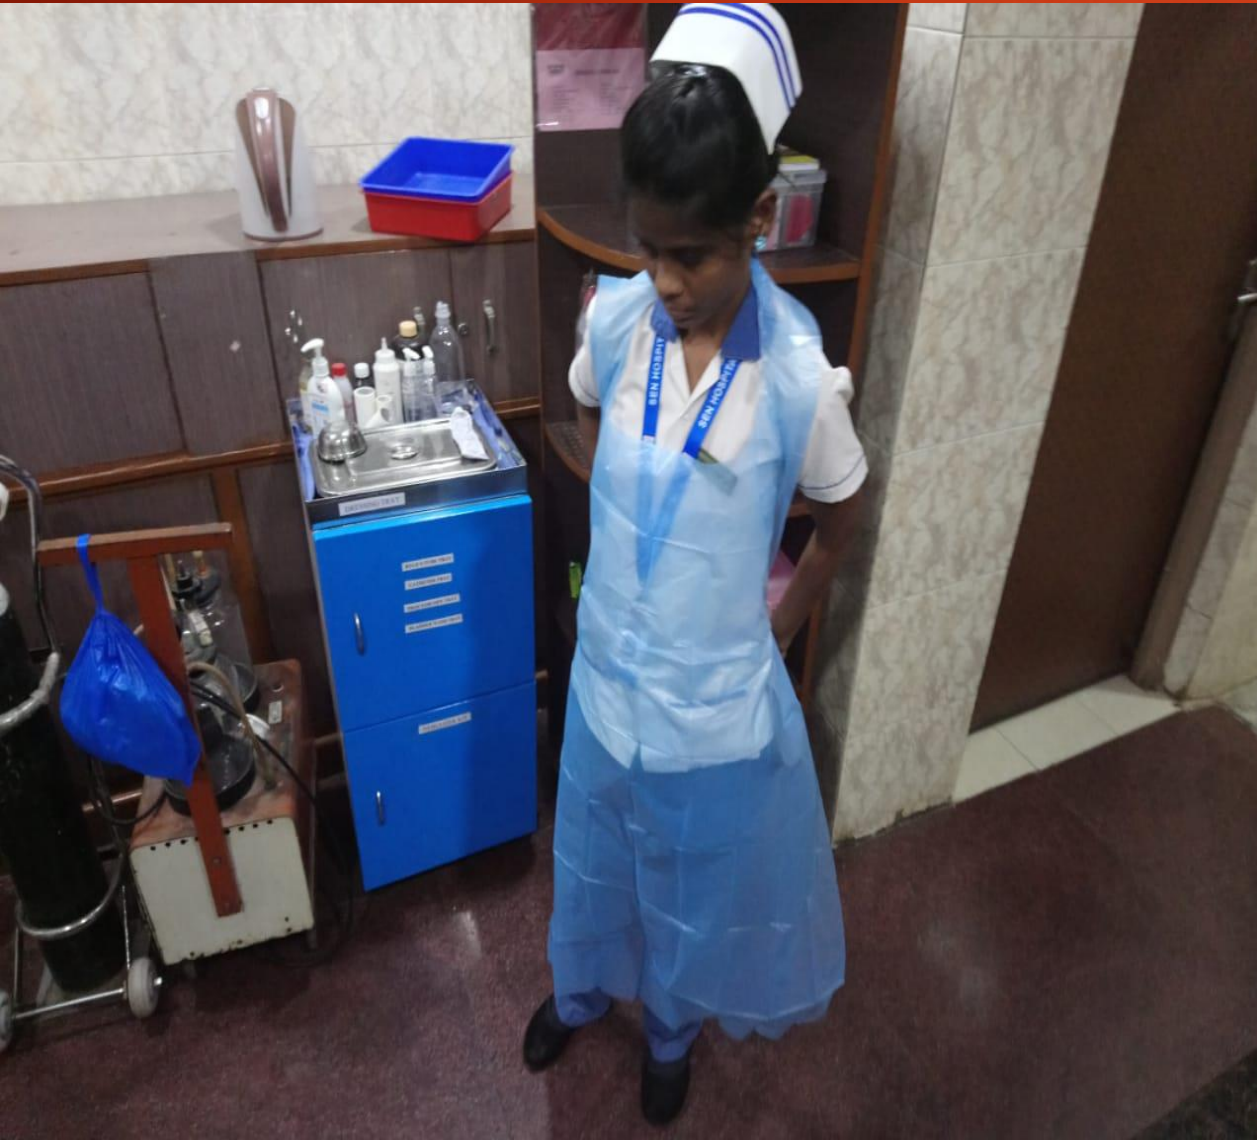







Put the broken BP apparatus in a plastic bag  
And store it safety.





Use UV torch to locate the spilled mercury





Do not use Broom Stick or Vacuum Cleaner to collect the mercury. Collect the mercury beads together using a Cardboard sheet.





Use the syringe to suck the remaining mercury and carefully release the mercury inside the plastic container containing half filled with water and seal it.





# Collect the remaining mercury with the help of Surgical tape









Place the contaminated tape, syringe, gloves, cardboard in the plastic bag.





# Tag the yellow plastic bag tight and then label the Bag as Mercury Spill





Inform to the local Biomedical waste Management for disposing it. Enter the incident in the incident register.





**THANK YOU**

